


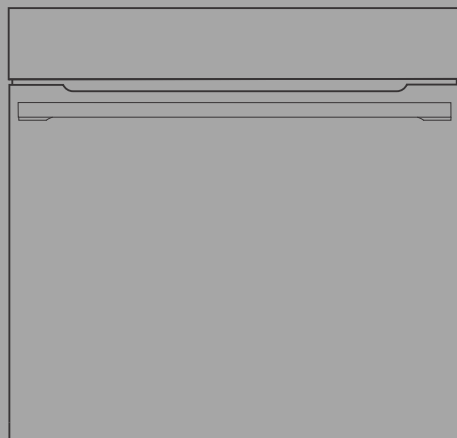

INSTRUCTIONS FOR USE
COMBINED MICROWAVE OVEN
EN

OCM24BGH.AU
OCM24SSH.AU

Contents


Introduction	3	End of cooking by touching	29
Safety precautions	4	Gratin (+ menu)	29
Safe use of the microwave oven	5	Crispy bottom	30
Other important safety warnings	8	Save program - save your own settings	31
ConnectLife	10	General settings	32
Appliance description	11	Display lock (+ menu)	33
Appliance equipment	11	Wi-Fi management	34
Control panel	13	Managing the oven remote control	34
Before using the appliance for the first time	15	General tips and advice for baking	36
Switching on for the first time	15	Cooking table	37
Calibration with the food probe	16	Cooking with a food probe	44
Microwave function	17	Cleaning and maintenance	47
Using the oven – selecting the baking settings	18	Cleaning with steam	48
Main menu - Manual	19	Removing wire and fixed pull-out (extendible) guides	48
Timer - Timer functions	22	Replacing the bulb	49
Stage cooking (+ menu)	24	Troubleshooting	50
Microwaves	25	Troubleshooting table	50
Auto programs	25	Label – appliance information	51
Extra	26	Compliance information	52
Starting the cooking process	28	Environment protection	53
		Cooking test	54

We thank you for your trust and the purchase of our appliance.

This detailed instruction manual is supplied to make the use of this product easier. The instructions should allow you to learn about your new appliance as quickly as possible.

Make sure you have received an undamaged appliance. If you do find transport damage, please contact the seller from which you purchased the appliance, or the regional warehouse from which it was supplied. The telephone number can be found on the invoice or on the delivery note.

Carefully read the instructions for use before connecting the appliance. Repair or any warranty claim resulting from incorrect connection or use of the appliance shall not be covered by the warranty.

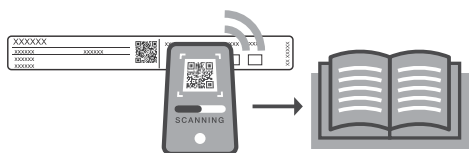

For more detailed instructions and tips scan the QR code on the rating plate.

The following symbols are used throughout the manual and they have the following meanings:



INFORMATION!

Information, advice, tip, or recommendation



WARNING!

Warning – general danger

ConnectLife

Connect your oven to a Wi-Fi network and the ConnectLife app to access all its functions, including advanced features and remote control.

IMPORTANT SAFETY PRECAUTIONS – CAREFULLY READ THE INSTRUCTIONS AND SAVE THEM FOR FUTURE REFERENCE.

The appliance may only be connected to the power mains by an authorized service technician or expert. Tampering with the appliance or nonprofessional repair thereof may result in risk of severe injury or damage to the product.

Appliance must be connected to fixed wiring which has incorporated means of disconnection. Fixed wiring must be made in accordance with the wiring rules.

For stationary appliances permanently connected to the fixed wiring, compliance with this requirement is deemed to be met if the disconnection instruction incorporated into the fixed wiring complies with AS/NZS 3000.

The appliance must not be installed behind a decorative door in order to avoid overheating.

WARNING: A damaged power cord or connector must only be replaced by the manufacturer, an authorized service technician, or a qualified professional. Improper handling may result in electric shock, fire, or serious injury.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Accessible parts may become hot during use. Young children should be kept away.

The appliance is not intended to be controlled by external timers or separate remote control system.

Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass/ the glass of hinged lids of the hob (as appropriate), since they can scratch the surface, which may result in shattering of the glass.

Do not use steam cleaners or high-pressure cleaners to clean the appliance as this may result in an electric shock.

WARNING: Before replacing the light bulb, make sure the appliance has been disconnected from the mains power, in order to prevent the hazard of an electric shock.

Never pour water directly on the bottom of the oven cavity. Temperature differences could result in damage to the enamel coating.

Safe use of the microwave oven

WARNING: Due to the extremely high temperatures generated when the appliance is used in combination mode, it is recommended that children only use the oven under adult supervision.

WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

WARNING: It is extremely hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of covers protecting against exposure to microwave energy.

WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.

The appliance is intended for use in households and similar environments, such as:

- staff pantries in stores and other working environments;
- family farms;
- accommodation units for guests at hotels, motels, and other accommodation or lodging establishments;
- bed and breakfast establishments.

Only use utensils suitable for use in microwave ovens.

When cooking with microwaves, do not use metal containers for food or beverages.

Safety precautions

When heating food in plastic or paper containers, keep an eye on the oven, as such packaging may ignite.

Microwave heating of beverages can result in delayed eruptive boiling. Therefore, take care when handling the container with the heated beverage. To prevent this, place a non-metal object (e.g., a wooden, glass, or plastic spoon) into the container during the heating-up process.

To avoid burns, the contents of baby bottles and baby food jars should be shaken or stirred, and their temperature checked before feeding.

Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.

If you observe smoke, switch off or unplug the appliance and keep the oven door closed to stifle any flames.

The microwave oven is intended for heating food and beverages. Drying food or clothing and heating of hot packs or pads, slippers, sponges, moist cloths etc. may result in injury, ignition, or fire.

The oven should be cleaned regularly, and any food deposits should be removed.

Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

If the appliance is integrated into a kitchen cupboard with a door, the cupboard door should be open while the appliance is in use.

The microwave oven is allowed to be placed or installed less than 850 mm above the floor.

WARNING: Ensure that the cavity does not contain any items or utensils that are not suitable for the use with the microwave oven before you operate the appliance.

WARNING: Do not use the cavity for storing combustible products, cooking utensils, or food and similar when the microwave oven is not in use.

The microwave oven is intended to be used built-in or in a cabinet. The appliance can be used while placed in a cabinet.

The appliance must be operated with any cabinet door open.

Other important safety warnings

The appliance is intended for household use. Do not use it for any other purpose, such as room heating, drying of pets or other animals, paper, fabrics, herbs etc. As this may lead to injury or fire hazard.

The appliance may only be connected to the power mains by an authorized service technician or expert. Tampering with the appliance or nonprofessional repair thereof may result in risk of severe injury or damage to the product.

We recommend that (due to appliance weight) at least two persons carry and install the appliance.

Do not lift the appliance by holding it by the door handle.

Oven door hinges may be damaged when under excessive load. Do not stand or sit on the open oven door, and do not lean against it. Also, do not place any heavy objects onto the oven door.

If the power cords of other appliances located in the vicinity of the oven become entangled in the oven door, they may get damaged, which may cause a short circuit. Therefore, make sure that the power cords of other appliances are at a safe distance.

Make sure the vents are never covered or obstructed in any other way.

Do not line the oven walls with aluminium foil and do not place baking trays or other containers on the bottom of the oven. This would reduce air circulation in the oven, obstruct and slow down the baking process and destroy the enamel coating.

We recommend you avoid opening the oven door during baking, as this increases power consumption and condensate accumulation.

At the end of the baking process, and during baking, be careful when opening the oven door, as there is danger of scalding.

To prevent limescale accumulation, leave the oven door open after baking or using the oven, to allow the oven cavity to cool down to room temperature.

Clean the oven when it has completely cooled down.

Eventual mismatches in colour shades between different appliances or components within a single design line may occur due to various factors, such as different angles under which the appliances are observed, different coloured backgrounds, materials, and room illumination.

Do not use the appliance if it is damaged. Unplug the appliance from the power mains and call an authorized service centre.

The oven can be safely used with or without baking pan guides.

Do not store items in the oven, which could cause danger when the oven is switched on.

Heed the minimum distance between the upper edge of the oven and the closest object above it.

The microwave oven is intended for heating food and beverages. Drying food or clothing and heating of hot packs or pads, slippers, sponges, moist cloths etc. may result in injury, ignition, or fire.

Always use oven mitts to remove dishes from the oven. Some pots, pans, or trays may absorb the heat from the food and thus become very hot.

Make sure to **only use the cookware** that is suitable for use in a microwave oven. Do not use steel cookware or cookware with golden or silver decorative edges or ornaments.

Do not leave any accessories or utensils in your oven when it is off. Do not switch on an empty oven to avoid damaging it.

Other important safety warnings

Do not use porcelain, ceramic, or earthenware cookware if such materials are porous or if such cookware is not glazed on the inside. Once heated up, the moisture that would penetrate these pores could cause cracking. Only use cookware intended for use in a microwave oven.

Always read and observe the instructions for heating in a microwave oven, specified on the food packaging.

Be careful when heating alcohol-containing food, as a combustible mixture of alcohol and air may form inside the oven. Be careful when opening the door.

Use of metal cookware, forks, spoons, knives or staples or fasteners on frozen food packages is not recommended when **cooking or heating with microwaves** or a combination of microwaves and convection baking. After heating, stir the food or leave it to rest until the heat is evenly distributed.

Do not connect the appliance to power supply if an ELCB (earth-leakage circuit breaker) is installed in the power supply circuit.

WARNING!

Carefully read the instructions for use before connecting the appliance. Repair or any warranty claim resulting from incorrect connection or use of the appliance shall not be covered by the warranty.

Connecting the appliance to the ConnectLife application

ConnectLife is a smart home platform that connects people, devices and services. The **ConnectLife** application includes advanced digital services and carefree solutions that allow users to monitor and control appliances, receive notifications from a smartphone, and update software (supported features may vary depending on your appliance and the region/country in which you are located).

To connect your smart device, you need a home Wi-Fi network (only 2.4 GHz networks are supported) and a smartphone equipped with the application **ConnectLife**.

 **ConnectLife**



To download the **ConnectLife** application, scan the QR code or search for **ConnectLife** in your favourite app store.

1. Install the **ConnectLife** application and create an account.
2. In the **ConnectLife** application, go to the "Add device" menu and select the appropriate type of device. Then scan the QR code (it can be found on the nameplate of the appliance; you can also enter the AUID/MV number manually).
3. The application then guides you through the entire process of connecting the appliance to your smartphone.
4. After a successful connection, the appliance can be operated remotely via the mobile application.

INFORMATION!

If this setting is not available, then your oven is not fitted with a Wi-Fi module and does not support internet connectivity.


When the Wi-Fi module is enabled and connections are successfully set up and synchronized, then the oven can be controlled and operated via a mobile device and the **ConnectLife** app.

The Wi-Fi connection works in the same frequency range as some other devices (e.g. microwave ovens and remote-controlled toys). Consequently, temporary or permanent disruption of the connection is possible. In such cases, the availability of the offered functions cannot be guaranteed.

Ensuring the quality of the functions offered depends heavily on the signal strength. If the router is far away from the appliance, there may be problems with the reliability of the connection.

⚠ WARNING!

Appliance functions and equipment depend on the model.

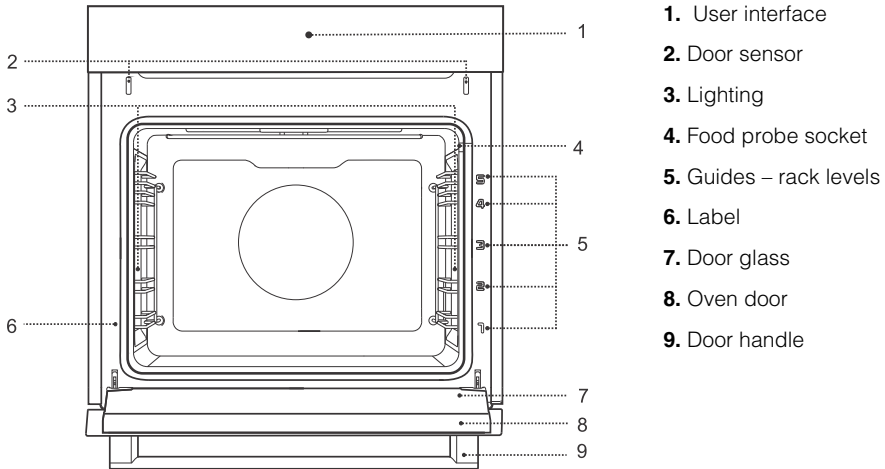

1. User interface
2. Door sensor
3. Lighting
4. Food probe socket
5. Guides – rack levels
6. Label
7. Door glass
8. Oven door
9. Door handle

Appliance equipment (depending on the model)

Oven door switch

If the oven door is opened during oven operation, the switch turns off the heaters, microwaves, and fan in the oven cavity.

Guides

Wire guides – always insert the wire rack and baking tray into the guide.

NOTE: Guides – rack levels are counted from the bottom up.

Oven equipment and accessories

⚠ WARNING!

 
The rack, universal baking tray, Airfry mesh baking tray, stainless steel steam tray or any other metal parts must not be used in microwave systems.



Wire rack– used for grilling/broiling or as support for a pan, baking tray or baking dish.

NOTE: When inserting the wire rack into the guide, always make sure its elevated part is at the back and on the top side.


There is a safety latch on the wire rack. Therefore, the wire rack has to be lifted slightly at the front when pulling it out from the oven.




Glass baking tray – is used to cook food with all oven systems and microwaves. It can also be used as a serving tray.

Appliance description

 Table continued from last page

	All-purpose baking tray – a versatile baking tray useful for baking pastries, bakery products, cooking vegetables and all types of meat. It can also be used as a drip tray.
	Food probe - (ΛFOOD PROBE) It can be used to measure the core temperature of a dish. When the desired temperature is reached, cooking will stop automatically.

Control panel

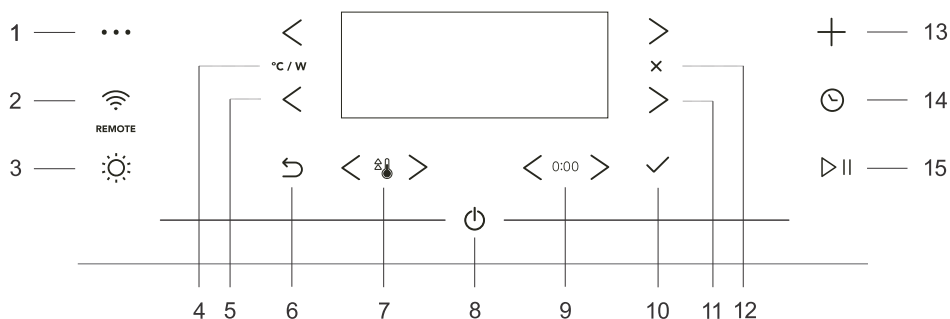

Key		Use
1.	•••	Selection of basic menus
2.	Wi-Fi symbol REMOTE	Wi-Fi connectivity setting and remote control
3.	Sun symbol	Switching the oven light on and off
4.	°C / W	Switching between setting temperature or power
5.	<	Left selector key
6.	Exit/Return symbol	Exit or return without saving
7.	Fast preheat symbol	Switching the fast preheat on and off
8.	Power symbol	Switching the oven on and off
9.	0:00	Time function resets
10.	✓	Confirmation of selection, settings
11.	>	Right selector key
12.	X	Cancel the current setting, delete the function
13.	+	Advanced settings
14.	⌚	Selection of time functions
15.	▶	Starting and stopping the operation

Appliance description

Table continued from last page

NOTE: Only the keys that are enabled in the current menu are illuminated (fully or partially) on the control panel.

Explanation of shortcuts in the manual:	
 Short press – for basic selections	 Long press, 5 seconds – for additional settings or fast increase of setting

 **INFORMATION!**

All settings are controlled by the keys.
For better key responsiveness, touch them with a large area of your fingertip. Each time you press a key, this will be acknowledged by an acoustic signal (when this function is available).

			
First step	Intermediate step	Passed time (exp. oven is operational)	Optional step

Before using the appliance for the first time

1.	Remove oven utensils and any packaging (cardboard, polystyrene foam, plastic) from the oven.
2.	Wipe the oven accessories and interior with a damp cloth. Do not use abrasive or aggressive cloths or cleaners.
3.	Switch on the oven (see chapter <i>Switching on for the first time</i>).


NOTE: During heating, the characteristic "new smell" is released, so ventilate the room thoroughly during this time.

Switching on for the first time

After connecting the appliance to the mains for the first time or after a prolonged power outage, you will need to set the language and time.

💡 INFORMATION!

If you do not want to set this, touch ✓. The default settings will be saved. You can change the settings at any time (see chapter *General settings*).

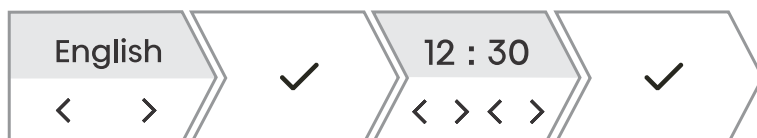

1.	Setting the language: The display shows the default language (English). By pressing < or > you can change the language. Confirm with ✓.
2.	Setting the exact time: By pressing < or > you can set the exact time of day. Set the hours and minutes separately. Confirm your selection with ✓.
3.	Calibration with the food probe The calibration procedure ensures the accuracy of the temperature measurement, as it automatically eliminates any deviations (with a maximum of ± 1 °C). As part of the process, a heating process is also carried out, which removes the residues of the production process and any unpleasant odours through a special heating programme at high temperature. This way, the unpleasant smells will not be transferred to the food prepared in the oven.

All initial settings are set and the appliance is in standby mode.

Standby mode


To save energy, the display will automatically switch off after a few minutes of non-use and enter standby mode with the lowest power consumption. Some settings, such as the clock display or Wi-Fi can be changed in standby mode, but this will increase power consumption. (For more information on energy saving scan the QR code on the rating plate.)

Before using the appliance for the first time

Calibration with the food probe

(depending on the model)

During the calibration process, the food probe allows accurate measurement of the temperature at the centre of the oven (+/-1°C).

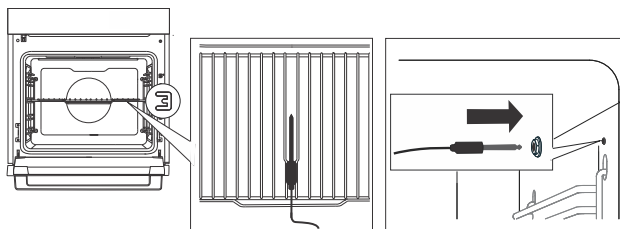

- | | |
|----|---|
| 1. | Remove any loose accessories from the oven. Place the wire rack to the third position. |
| 2. | Place the probe in the centre of the rack, with the tip facing the back of the oven. |
| 3. | Unscrew the socket cover (only on some models) on the front in the upper righthand corner of the oven and plug the probe into the socket. |
| 4. | The total calibration process lasts for 4 hours. Do not open the oven door during calibration. |
| 5. | A sound signal is emitted, the calibration is complete. The probe can be switched off and safely put away. |

The total calibration time is up to 4 hours. In the event that you decide to skip the procedure, the device will not send further pop-up notifications about performing the procedure. Calibration can be done at any time in the settings menu.


NOTE: During the heating process, unpleasant odours or the characteristic "new smell" may come from the oven. Thoroughly ventilate the room throughout the duration of the programme.

Microwaves are used for **cooking and defrosting of food**. They allow quick and efficient cooking without changing the colour or shape of the food.

Microwaves are a type of electromagnetic radiation. Such radiation is commonly found in our environment in the form of radio-electric waves, light or infrared rays. Microwave frequency is in the 2,450 MHz range.




WARNING!

Never use or activate a microwave system if the oven is empty.

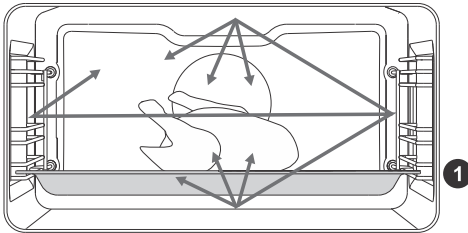

Following are their characteristics:

- microwaves are reflected by metals,
- microwaves travel through other materials,
- microwaves are absorbed by water, fat, and sugar molecules.

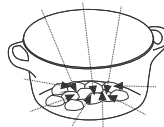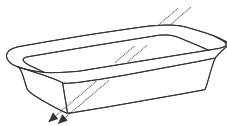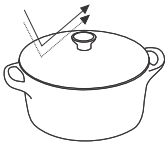

When food is exposed to microwaves, the molecules begin to move rapidly, thereby generating heat.

The microwaves penetrate approximately 2.5 cm deep into the food. If the food is thicker, the core of the food will be cooked by conduction, as in conventional cooking.

Using the oven – selecting the baking settings

Home menu

Switch on the appliance  and select **...**. By pressing **<** or **>** you can choose from different menus:

OVEN	Allows you to arbitrarily set the cooking parameters with factory preset values that can be changed (see chapter <i>Main menu - Manual</i>).
MICROWAVE	Quick access to systems with Microwaves. They are used for quick reheating, defrosting and cooking of food (see chapter <i>Microwaves</i>).
AUTO PROGRAMS	Allows a large selection of preset programmes depending on the selected dish (see chapter <i>Auto programs</i>).
SAVED PROGRAMS	This mode allows you to select your own programmes that you have previously saved (see chapter <i>Save program - save your own settings</i>).
EXTRA	Selection of additional programmes (see chapter <i>Extra</i>).
CLEANING	Oven cleaning programmes.
SETTINGS	General oven settings (see chapter <i>General settings</i>).

+ menu - additional settings

The function provides additional setting options. Menu content varies depending on the control options available at that time.

To select additional settings, touch **+**.

STAGE COOKING	Three-step cooking setting with different parameters (see chapter <i>Stage cooking (+ menu)</i>).
INFORMATION	Detailed information on the programmes and function of the oven systems.
GRATIN	It is used for dishes to which you add dressing/topping or you want to additionally bake its surface at the end. The function can be selected after 10 minutes of cooking or at the end of cooking (see chapter <i>Gratin (+ menu)</i>).
SAVE PROGRAM	Saving selected custom settings (see chapter <i>Save program - save your own settings</i>).
DISPLAY LOCK	Activating / deactivating the safety key lock to protect the oven from accidental use (see chapter <i>Display lock (+ menu)</i>).

Using the oven – selecting the baking settings

Main menu - Manual



1.	Switch on the appliance  .
2.	By pressing < or > you can select the cooking system (see table Selection of cooking systems).
3.	By pressing < or > you can set the temperature or power.
4.	Use quick preheating to bring the oven to the desired temperature as quickly as possible. By pressing  the symbol will light up fully. When the set temperature is reached, an acoustic signal sounds. The display will show INSERT THE DISH . Open the door and insert the dish. The programme automatically resumes cooking with the selected settings.
5.	Additionally, you can set: - Timer (see chapter <i>Timer - Timer functions</i>) - Cooking by steps (see chapter <i>Stage cooking (+ menu)</i>) Additionally, you can set: - Timer (see chapter <i>Timer - Timer functions</i>) - Cooking by steps (see chapter <i>Stage cooking (+ menu)</i>)
6.	To start cooking, touch  .

Choosing the baking system

Symbol	Use
	BOTTOM + TOP HEATER Use this system for conventional cooking on a single rack, making soufflés, and cooking at low temperatures (slow cooking). We recommend using preheating, except for dishes that are marked differently in the spreadsheet.
	HOT AIR Hot air allows for better air circulation around the dish. In this way, it dries its surface more and creates a thicker crust. For roasting meat, baking cakes, cooking vegetables and for drying food at one or more levels at the same time.
	HOT AIR + BOTTOM HEATER Perfect for making pizza and pastries with a higher water content. For cooking on one level when you want your dishes cooked and crisp as quickly as possible.

Using the oven – selecting the baking settings

Table continued from last page

Symbol	Use
	BOTTOM + TOP HEATER + FAN For even cooking of dishes on one level and making souffles. We recommend using preheating, except for dishes that are marked differently in the spreadsheet.
	LARGE GRILL For cooking large quantities of flat foods, such as toasted bread, canapees, grill sausages, steaks, fish, skewers, as well as for gratinating and achieving a nice crispy crust. The heaters mounted on the top of the oven cavity heat the entire surface evenly. Low level - suitable for cooking fish fillets, whole fish, frying cheese. Medium level - suitable for cooking small pieces of meat, fish cutlets, vegetables, canapees, skewers. High level - suitable for cooking steaks, burgers, grill sausages, toast and cooking au gratin.
	LARGE GRILL + FAN For roasting poultry and grilling large pieces of meat.
	MORE SYSTEMS Confirm your selection with ✓. Additional systems will be displayed.
	HOT AIR + MICROWAVE For faster cooking and reheating of food while browning the surface. It is used for all types of meat, stews, vegetables and au gratin dishes (dishes that require a longer cooking time).
	LARGE GRILL + FAN + MICROWAVE For faster grilling of poultry, fish and larger pieces of meat. Microwaves act as a supporting function of the system and speed up food preparation time.
	MICROWAVE They are used to quickly reheat, defrost and cook food.
	LARGE GRILL + BOTTOM HEATER For faster cooking of dishes on one level and for a crispy pastry crust.
	BOTTOM HEATER + GRILL For gentle and controlled slow cooking of delicate food (soft cuts of meat) and baking pastry with a crunchy bottom.
	BOTTOM HEATER + GRILL + FAN For optimal preparation of yeast-leavened bakery products and all types of bread and for preservation.
	LARGE GRILL + BOTTOM HEATER + HOT AIR For dishes where even crispiness from all sides is desirable. The function is also suitable as a first step of multi-step roasting of meat, as it allows for quick searing of the surface in the initial phase and slow roasting in the second phase. The meat will be juicy and the crust nicely browned.

Using the oven – selecting the baking settings

Table continued from last page

Symbol	Use
	AIR FRY This cooking method gives the food a crispy crust, without added fat. It is a healthy version of "fast food" with a lower calorie content. Suitable for small cuts of meat, fish, vegetables and pre-cooked frozen products (French fries, chicken medallions, etc.). For best results, we recommend placing your food in a cold oven. If the oven is preheated, set the temperature up to 20 °C higher than indicated on the food packaging.
	ECO HOT AIR ¹⁾ For gentle, slow and even cooking of meat, fish and pastries on one level. This way of cooking retains a higher proportion of water in the meat, which leaves it juicier and softer, while the pastry becomes evenly browned/baked. The used temperature range is between 140 °C and 220 °C.
	AUTO PROGRAMS Shortcut to the Auto menu (see chapter Auto menu)

¹⁾ This function is used to determine the energy efficiency class according to EN 60350-1.

Using the oven – selecting the baking settings

Timer - Timer functions

To select the timer functions, touch . By touching the buttons < or > you can select the time function you want to set.

INFORMATION!

The clock must be set to day time.

INFORMATION!

You can reset the selected time function by touching **0:00** .

Description / time function	Use
DURATION	In this mode, you can specify the duration of operation for the oven.
EGG TIMER	The independent alarm operates independently of the oven operation. After the set time has expired, the appliance does not turn on or off automatically.
END BAKING AT	Use this mode when you want the food in the oven to start cooking with a time delay. Enter the duration and desired end time of cooking. The appliance starts automatically and ends its operation at the desired time.

Setting duration




1.

By pressing < or > you can set the desired cooking time (hours and minutes). Confirm your selection with . The oven operating time selected will appear on the display unit.
2.

To start cooking, touch .

Setting the timer

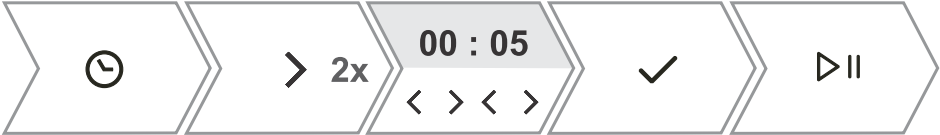

Using the oven – selecting the baking settings

1. By pressing < or > you can set the duration of the independent alarm (hours and minutes). Confirm your selection with ✓.

The maximum possible setting is 24 hours.

NOTE: If the appliance is switched off, the alarm will still be active.

End of cooking setting



💡 INFORMATION!

Delayed start is not possible if you select a system with microwaves or when you select the preheat function.

1. First set the cooking time. With the key < or > you can set the desired cooking time (hours and minutes). Confirm your selection with ✓. The oven operating time selected will appear on the display unit.
Example: cooking time is 2 hours
2. You can select the delayed operation by pressing ⌚ and then double-clicking on > . By pressing < or > you can set the time at which you want the dish to be ready. Confirm your selection with ✓. The desired end time is shown on the display.
Example: cooking ends at 18:00 ⌚
3. To start cooking, touch ▷|| .
The oven switches to partial standby mode while waiting for switch-on. The selected settings are automatically switched on and off at the selected time.
Example: cooking starts at 16:00, cooking ends at 18:00

After the set time has expired, the oven stops working automatically. A short beep will be emitted.

⚠ WARNING!

This function is not suitable for food that requires quick preheating. Perishable food should not be kept in the oven for a long time. Before using this mode, check whether the clock on the appliance is accurately set.


Using the oven – selecting the baking settings

Stage cooking (+ menu)

This function allows you to set the cooking in three steps (combine three consecutive cooking steps in one cooking process).

💡 INFORMATION!

The function can be set in the Main Menu - manual cooking mode (see chapter *Main menu - Manual*).

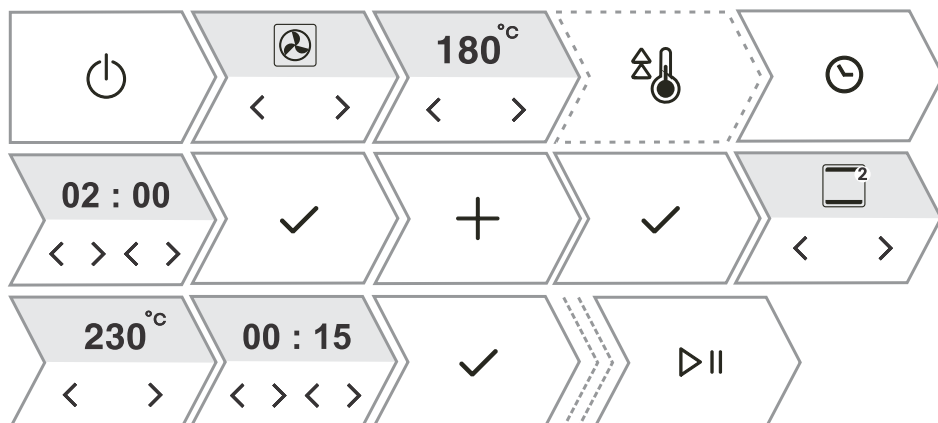

- | | |
|---|---|
| 1. | Switch on the appliance ⏻ . |
| 2. | STAGE 1
By pressing < or > you can select the cooking system, temperature and cooking duration as the first step. You can also choose quick preheating. |
| 3. | Select additional settings. Press + . The display shows ADD STAGE? . Confirm with ✓ . |
| 4. | STAGE 2
Select the settings for the second cooking step (see setting under point 2) and touch ✓ .
NOTE: Do the same for STAGE 3 . |
| 5. | You can also change all three steps before starting cooking. By pressing < or > you can select the step you want to change. |
| 6. | To start cooking, touch ▷ .
The oven first starts working with the settings for the first step. |
| NOTE: You can remove an individual step by touching ✕ . | |

Using the oven – selecting the baking settings

Microwaves

Used to quickly reheat, defrost and cook food.



1. Switch on the appliance and select By touching < or > select **MICROWAVE**. Confirm with ✓ to enter the submenu.
2. Additionally, you can set:
- The timer - you can set the duration of operation and the alarm (see chapter *Timer - Timer functions*)
3. To start cooking, touch ▷|| .


Microwave power level

Power	Use
1000 W	Quickly reheating beverages, water and dishes containing a large volume of liquid.
750 W	Cooking fresh or frozen vegetables.
600 W	Melting chocolate. Cooking meat and seafood. Cooking side dishes.
360 W	Reheating and cooking of delicate egg-based dishes.
180 W	Defrosting other food, softening butter, softening ice cream.
90 W	Defrosting cream pastry, fruit, vegetables, and ground/minced meat.

Auto programs

The programme offers you a large selection of preset recipes that were approved by chefs and nutritionists.

Using the oven – selecting the baking settings

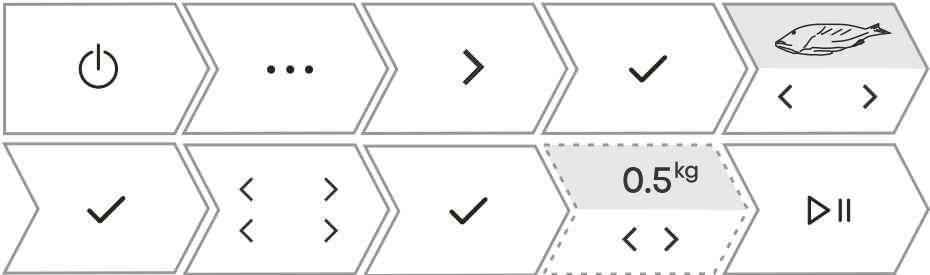

- | | |
|----|---|
| 1. | Switch on the appliance and select By touching < or > select AUTO PROGRAMS . Confirm with ✓ to enter the submenu. |
| 2. | By touching < or > you select the type of food and then the selected dish. Confirm with ✓ .
The recipes have a predetermined system, temperature and cooking time.
NOTE: For some dishes, you can change the weight and degree of cooking. |
| 3. | To start cooking, touch ▷ . |
| 4. | Some dishes also include the quick preheating function. When the set temperature is reached, an acoustic signal will sound. The display will show Insert dish . Open the door and insert the dish. The programme automatically resumes cooking with the selected settings. |
- NOTE: By touching **+** you can see a detailed description of the current selection.

Extra




- | | |
|----|---|
| 1. | Switch on the appliance and select By touching < or > select EXTRA . Confirm with ✓ to enter the submenu. |
| 2. | By touching < or > you select the function (see table below). Confirm with ✓ .
Preset values are displayed. Some functions allow you to set the temperature and cooking duration. |
| 3. | To start cooking, touch ▷ . |

Using the oven – selecting the baking settings

Programme	Use
AIR FRY	Frying food with hot air, without added fat. Faster and healthier version of "fast food". This cooking method gives the food a crispy crust, without added fat. It is a healthy version of "fast food" with a lower calorie content. NOTE: For optimal results, use an Airfry grid tray, which allows hot air to circulate evenly around the food. Frying food with hot air, without added fat. Faster and healthier version of "fast food". This cooking method gives the food a crispy crust, without added fat. It is a healthy version of "fast food" with a lower calorie content.
PROOFING	The dough will rise faster and more evenly without drying out the surface. While the dough is rising, do not open the door.
DEHYDRATE	With the help of air, you reduce the amount of moisture in the food and thus prolong its durability.
DEFROST	It is used for slow defrosting of frozen food (cakes, pastries, breads and rolls and deep-frozen fruit). Halfway through the defrosting time, turn the food pieces over and separate them if they have been frozen on top of each other.
REHEAT	This mode allows you to gently reheat ready-made dishes. Do not open the door unnecessarily during operation.
KEEP WARM	It is used to keep already prepared dishes warm. Do not open the door during operation.
PLATE WARMING	Useful if you want to preheat the plates or cups so that the food stays warm for a long time. You can set the temperature.
PRESERVING	The process by which we prolong the durability of the food. Use jars with a rubber sealing ring and lid. Do not use jars with threaded or metal caps or metal tins. Pour 1 litre of hot water (approximately 70 °C) into the deep tray and place 6 identical jars into the tray. Place the baking tray in the oven on the second guide.
STERILISE BOTTLES	Suitable for sterilisation of all types of bottles. Sterilisation is a process that destroys all types of microorganisms.
SABBATH	The Sabbath function allows the food in the oven to stay warm without having to turn the oven on and off. Set the duration of operation (between 24 and 72 hours) and temperature. By pressing  , the countdown begins. All sounds and operations are switched off except for the key  . NOTE: In case of a power outage, Sabbath mode will be deactivated and the oven will return to its initial state.

Starting the cooking process

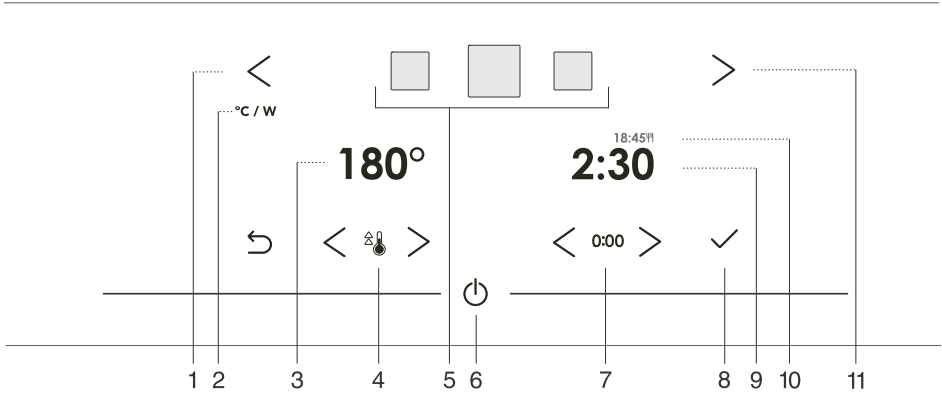

Key	Use
1.	< Left selector key
2.	°C / W Switching between setting temperature or power
3.	180° Selecting the temperature
4.	Fast preheat icon Switching the fast preheat on and off
5.	Selected cooking system
6.	Power button Switching the oven on and off
7.	0:00 Time function resets
8.	✓ Confirmation of selection, settings
9.	2:30 Elapsed cooking time
10.	18:45 End time
11.	> Right selector key

NOTE: Only the keys that are enabled in the current menu are illuminated (fully or partially) on the control panel.

During the cooking process, you can change the system, temperature and timer functions.

End of cooking by touching

After cooking is completed, the display shows **BAKING FINISHED**.
You can also stop the operation by touching **BAKING FINISHED**.



By pressing < or > you can choose a new setting. Confirm with ✓ .
Menu content varies depending on the control options available at that time.

FINISH	Select End to finish cooking. The main menu appears on the display.
CONTINUE BAKING?	By selecting this, you extend the cooking with the same system and temperature settings. NOTE: If you had a cooking duration set, the time is counted forward from where it was stopped.
GRATIN	Select to cook the top of the dish even more (see chapter <i>Gratin (+ menu)</i>).
CRISPY BOTTOM	Select to further brown the underside of the dish (see chapter <i>Crispy bottom</i>).
ADD TO SAVED PROGRAMS?	This mode allows you to save the selected settings to your favourites and use them again later (<i>Save program - save your own settings</i>).

💡 INFORMATION!

After the operation is completed, all timer settings are also stopped and deleted, except for the egg timer. Time of day (clock) will be displayed. The cooling fan will continue to operate for a while.

After the use of the oven, some water may be left in the condensate channel (underneath the door). Wipe the channel with a sponge or a cloth.

Gratin (+ menu)

This function is used in the last phase of cooking, when we add dressing/topping to the dish or we want to crisp its surface. When using the gratin function, a crispy golden yellow crust is formed on the dish, which protects it from drying, and at the same time gives the dish a nicer appearance and better taste.



1. Touch + and press < or > to select **GRATIN**. The function is available after 10 minutes of operation.

End of cooking by touching

Table continued from last page

2.	The display shows the preset system (large grill) and the temperature 250 °C. Set the operating time (max 10 min) and confirm the selection by touching ▷ .
3.	The function can also be switched off during operation. Switch off the cooking by touching ▷ .

 **WARNING!**

Control the cooking. When using the au gratin function, the oven reaches high temperatures.

The au gratin function works for a maximum of 10 minutes, then the oven switches off automatically.

Crispy bottom



This function is available only at the end of cooking and can be activated for 10 min.	
1.	In the closing menu, press < or > to select CRISPY BOTTOM . Confirm your selection by tapping ▷ .
2.	Switch off the cooking by touching ▷ .

Save program - save your own settings

Save program is a feature that allows you to save your favourite and most frequently used settings and use them again in the future. Up to 12 recipes can be stored.



1. Saving recipes in settings.

Touch **+** and press **<** or **>** to select **ADD TO SAVED PROGRAMS?** Confirm with **✓**.

2. Saving the setting after cooking is completed.

In the closing menu, press **<** or **>** to select **ADD TO SAVED PROGRAMS?** Confirm with **✓**.

You can also change the name of a saved setting. By pressing **<** or **>** you select the letter and confirm it with **✓**. If necessary, delete the character with **✕**. Confirm with **+** to save your favorite recipe.

3. Displaying already saved recipes.

Touch **...**. Press **<** or **>** to select **SAVE PROGRAM**. Confirm with **✓** to enter the submenu. Saved recipes are displayed.

NOTE: You can also change the preset values for already saved recipes and save them under a new name after cooking.


4. Deleting already saved recipes

Switch on the appliance and select **...**. By touching **<** or **>** select **SAVE PROGRAM**. Confirm with **✓** to display saved recipes. Select a recipe and delete it by tapping **✕**.

General settings

WARNING!

After a power outage or after the appliance is switched off, additional function settings will remain stored for no more than a few minutes. Then, all settings, except for the acoustic signal volume and display dimmer will be reset to factory defaults.

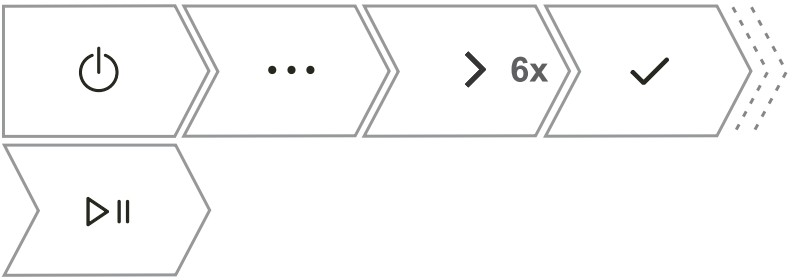





 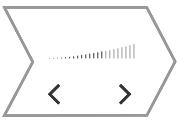
Touch Press < or > to select SETTINGS . Confirm with ✓ to enter the submenu. You can edit individual settings with the key < or > .		
1.		TIME Set the hours and minutes. You can select the 12h or 24h display by touching ⌚ .
2.		VOLUME You can choose between four levels of volume (no sound, low, medium, high).
3.		TOUCH SOUND Enable or disable key sound.
4.		NIGHT MODE This feature automatically reduces display brightness between 19:00 and 7:00 and turns off the clock display as well as the acoustic signals. To activate night mode, specify the start time and end time of operation. Turn off the night mode by pressing ⌚ .
5.		DISPLAY The function allows you to turn the daytime display on or off. It is deactivated by default (OFF). If the function is turned on (ON), electricity consumption may increase.

Table continued from last page

6.		FAST PREHEAT SETTINGS The function activates automatic preheating to cooking systems that allow it. Turn it on (ON) or off (OFF).
7.		HEATING SYSTEMS The function activates the display of all cooking systems on the display unit. Choose to turn on (ON) or off (OFF).
8.		RESET SETTINGS TO FACTORY The function resets the appliance to factory settings. The display shows Reset , which is confirmed by long pressing  .
9.		LANGUAGE The display shows the default language (English). If the language in which the texts are displayed on the display does not suit you, choose another one.
To exit the general settings menu, touch ... or 		

 Display lock (+ menu)

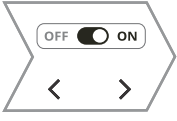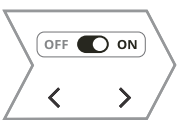

1.	Touch  and press  or  to select DISPLAY LOCK . Confirm the selection by touching  . The screen is now locked. To unlock the screen, touch  again and confirm your selection by long pressing  .
----	--

- If the lock is activated with no timer function engaged (only clock is displayed), then the oven will not operate.
- If the lock is activated after a timer function has been set, then the oven will operate normally; however, it will not be possible to change the settings.
- When the keys are locked, you cannot change the cooking systems or additional functions. You can only turn off the cooking.
- The keys remain locked even after the oven is switched off. To select a new system, you must deactivate the lock.

Wi-Fi management

Switch on the appliance .

To enter the Wi-Fi module function setting, touch .

If you have pressed  inadvertently, you can cancel the setting by holding (for 18 seconds) .

1.	 < 3 s 	Switching on the Wi-Fi module: After long-pressing (up to 3 seconds)  , the display will show WIFI ON to indicate that the module is switched on. The symbol WIFI ON will start blinking.
2.	 > 3 s < 6 s 	Connecting the appliance: After long-pressing (between 3 to 6 seconds)  , the display will show CONNECTION SETUP . NOTE: For further settings, follow the instructions in the ConnectLife app..
3.	 > 6 s < 9 s 	Connecting additional users: After long-pressing (between 6 to 9 seconds)  , the display will show PAIRING . Use this setting to connect additional users to the appliance using the ConnectLife app.. NOTE: For further settings, follow the instructions in the ConnectLife app..
4.	 > 9 s < 12 s 	Removing all connected users: After long-pressing (between 9 and 12 seconds)  , the display will show UNPAIR ALL . Use this setting to remove all connected users from the ConnectLife app..
5.	 > 15 s < 18 s 	Switching off the Wi-Fi module: Switch off the Wi-Fi connection by long tapping (between 15 and 18 seconds)  . The display will show WIFI OFF .

Managing the oven remote control



WARNING!

The remote monitoring function via a mobile device should not be used to replace direct personal supervision of the cooking process in the oven. Always regularly check, in person, what is actually going on in the oven.

Touch . The display shows **Remote**, indicating the possibility of remote control via the ConnectLife app.

INFORMATION!

For safety reasons, some functions are not available via remote access.

- If the oven is in standby mode and you open the oven door, the remote control option has to be enabled again.
- If oven door is opened during the baking process, the remote control option on the oven is disabled.
- Any user activity on the control unit will automatically disable the remote control option on the oven.
- Cancellation or completion of the baking program or process is the only option that remains available regardless of whether remote control is enabled or not.
- Remote control is disabled when using a microwave system (not applicable to combined microwave systems).

WARNING!

Always make sure the oven is used correctly and in compliance with the instructions, especially when using remote control. Do not run the oven via remote access unless you are certain about what exactly is in the oven.

Wi-Fi status	Wi-Fi symbol on the display unit
Wi-Fi is disabled.	Wi-Fi is constantly dimly lit.
Wi-Fi is enabled and it is successfully connected to the server.	The Wi-Fi symbol is constantly fully lit.
Wi-Fi is enabled and: • a connection to the server is being established, • is in the state of setting up or establishing connections, • there is no connection to the server.	Wi-Fi icon is fully lit and flashes.
Remote control of the oven is not enabled.	REMOTE symbol is not lit on the display unit.
Remote control of the oven is enabled.	REMOTE sign is fully lit on the display unit.

General tips and advice for baking

Equipment:

- Use equipment made of heat-resistant non-reflective materials (supplied baking trays and dishes, enamel-coated cookware, tempered glass cookware). Bright-coloured materials (stainless steel or aluminium) materials reflect heat. As a result, thermal processing of food in them is less effective.
- Always insert the baking sheets and trays to the end of the guides. When baking on the wire rack, place the baking dishes or trays in the middle of the rack.
- Do not place baking trays, food, or other items on the bottom of the oven. Such use may cause permanent damage to the interior surface of the oven and negatively affect the safety and efficiency of the appliance.
- Do not cover the oven cavity bottom or the wire rack with aluminium foil.
- Always place the baking dishes onto the wire rack.
- If you are using parchment paper, make sure it is resistant to high-temperatures. Always trim it accordingly. Parchment paper prevents the food from sticking to the baking tray and makes it easier to remove the food from the baking tray.
- When cooking directly on the wire rack, insert the all-purpose baking tray one level lower to serve as a drip tray.

Food preparation:

- For optimum food preparation, we recommend observing the guidelines specified in the cooking table. Choose the lower specified temperature and the shortest specified cooking time. When this time expires, check the results and then adjust the settings as necessary.
- When cooking according to recipes from older cookbooks, use the bottom and top heater system (as in conventional ovens) and set the temperature 10 °C lower than specified in the recipe.
- When cooking larger cuts of meat or pastry with higher water content, a lot of steam will be generated inside the oven, which in turn may condense on the oven door. This is a normal phenomenon which will not affect the operation of the appliance. After the cooking process, wipe the door and the door glass dry.

Efficient use of energy

- Preheat the oven only if indicated in the recipe or in the tables in this instruction manual. If you are using quick preheating, do not put food in the oven until the oven is fully heated, unless otherwise recommended. When heating an empty oven, a lot of energy is consumed, so if possible, we recommend that you prepare several dishes in a row or several dishes at the same time.
- Remove all unnecessary equipment from the oven during baking
- Unless it is absolutely necessary, do not open the oven door during baking.
- With longer cooking programs, you can switch off the oven approximately 10 minutes before the end of cooking time to make use of the accumulated heat.

Use of microwaves

- Use suitable cookware (glass, ceramic etc.).
- Use cookware with a lid for cooking vegetables. Add 1 tablespoon of water per 100 g of food.
- Turn or stir the food during the defrosting process.

General tips and advice for baking

Cooking table

NOTE: Dishes marked in the table:

- one star *, stir repeatedly and turn, two stars **, preheat the oven. In this case, do not use the quick preheat mode.

Dish	 cm			 °C	 min
PASTRY AND BAKERY PRODUCTS					
pastry/cakes in moulds					
sponge cake	60	3		160-170	30-40
	45	1			
pie with filling	60	2		170-180	60-80
	45	1			
marble cake	60/45	2		180-190	50-70
cake with leavened dough, Gugelhupf (Bundt cake, pound cake)	60/45	1		170-180	50-60
open pie, tart	60	3		170-180	35-45
	45	2			
brownies	60	2		170-180	35-45
	45				30-40
pastry on baking trays and dishes					
strudel	60/45	2		170-180	50-60
strudel, frozen	60/45	2		200-210	80-100
sponge roll	60	3		160-170	30-40
	45	1			25-35
buchten	60/45	2		180-190	30-40
biscuits, cookies					
cupcakes	60	3		140-150**	25-35
	45	2			
yeast-leavened small pastry	60	3		170-180	20-30
	45	2			
yeast-leavened small pastry, 2 levels	60	2+4		160-170	30-40
	45	1+3			

General tips and advice for baking

Table continued from last page

Dish	 cm			 °C	 min
puff pastry	60	3	—	190-200	10-20
	45	1			
puff pastry, 2 levels	60	2+4		160-170**	15-25
	45	1+3			10-20
cookies/biscuits					
piped cookies	60	3		140-150**	20-30
	45	2			25-35
cookies/biscuits	60	3		160-170**	15-25
	45	2			
biscuits, 2 levels	60	2+4		160-170**	15-25
	45	1+3			
meringue	60/45	2	—	80	110-130
meringue, 2 levels	60	2+4		100**	110-130
	45	1+3			
macarons	60	3	—	140	10
				130	15-20
	45	2		140	10
				130	15-20
bread					
rising and proofing	60	2		30	30-60
	45	1			
bread on a baking tray	60	1	—	220 **	40-55
				190-200	40-55
	45	2		220 **	15
				190	25-40
bread in a tin	60	1		230	30-45
				190-200	
	45			200 **	40-50
flatbread (focaccia)	60/45	2	—	220 **	20
				180	5-15

General tips and advice for baking

Table continued from last page

Dish	 cm			 °C	 min
fresh bread rolls (Semmel/morning rolls)	60	3		200-210 **	15-25
	45	2			
fresh bread rolls (Semmel/morning rolls), 2 levels	60	2+4		200-210 **	20-30
	45	1+3			15-25
toast	60	5		L3	5-15
	45	4			
open sandwiches	60/45	4		L2	3-10
pizza and other dishes					
homemade pizza	60	1		max	4-12
	45			max**	
homemade pizza, 2 rack levels	60	2+4		max	15-25
	45	1+3			20-30
frozen pizza	60	2		210-220	15-20
	45				15-25
frozen pizza, 2 levels	60	2+4		210-220	15-25
	45	1+3			
savoury pie, quiche	60/45	2		190-210	50-60
burek	60	1		200-210	35-45
	45				40-50
MEAT					
beef and veal					
beef roast (loin, rump), 1.5 kg	60/45	2		160-170	160-190
sirloin, medium done, 1 kg	60/45	2		180-190	35-45
beef roast, slow cooked	60	2		100-120	150-240
	45	1			
beef steaks, well done, 3 cm thickness	60/45	3		L2	20-30
burgers, thickness 3 cm	60	4		L3	30-40
	45	3			

General tips and advice for baking

Table continued from last page

Dish	 cm			 °C	 min
veal roast, 1.5 kg	60	2		190-200	90-110
	45	1			
pork					
pork roast, rump, 1.5 kg	60	3		190-200	70-100
	45	2			85-100
pork roast, shoulder, 1.5 kg	60	2		180-190	90-120
	45	1			
pork loin, 400 g, slow cooked	60	2		100-120	200-300
	45				250-350
pork roast, slow cooked	60	2		100-120	150-240
	45	1			
pork ribs, slow cooked	60	3		120-140	210-310
	45	2			
pork chops, thickness 3 cm	60	4		220-230	25-35
	45	3			
poultry					
poultry, 1.2–2.0 kg	60/45	1		200–210/360	45-60
poultry with stuffing, 1.5 kg	60/45	2		170-190	100-120
poultry, breast	60	3		170-180	60-90
	45	2			
chicken thighs	60/45	1		190–200/600	20-30
chicken wings	60	3		210-220	35-45
	45	2			
poultry, breast, slow cooked	60	3		100-120	40-80
	45	2			
meat dishes					
meat loaf, 1 kg	60/45	2		170-180	60-70
grill sausages, bratwurst	60	4		L2	30-40*
	45	3			20-30*

General tips and advice for baking

Table continued from last page

Dish	 cm			 °C	 min
FISH AND SEAFOOD					
whole fish, 350 g	60	3		230–240/360	20-30*
	45			200-220**	
fish fillet, thickness 1 cm	60	4		210-220	5-15
	45	3			
fish steak, thickness 2cm	60	4		160-170	15-25
	45	3			
scallops	60	4		220-230 **	5-15
	45	3			
shrimps	60	4		L 1	20-30
	45				15-25
VEGETABLES					
broccoli, whole, 500 g	60/45	1		750	8-10
broccoli, florets, 500 g	60/45	1		750	5-15
peas, 2.5 kg	60/45	1		750	20-30
cauliflower, blossoms, 500 g	60/45	1		750	8-10
carrots, whole, 500 g	60/45	1		1000	13-14
asparagus, 500 g	60/45	1		750	8-10
baked potatoes, wedges	60	3		190-210	40-50*
	45	2			
baked potatoes, halved	60	3		200-220	30-40*
	45	2			
stuffed potato (jacket potato)	60	3		200-210	25-35
	45	2			
French fries, home-made	60/45	2		210-220	25-35*
mixed vegetables, wedges	60	4		200-210	10-20*
	45	2			15-25*
stuffed vegetables	60/45	2		200-210	40-50
CEREALS AND PASTA					

General tips and advice for baking

Table continued from last page

Dish	 cm			 °C	 min
rice	60/45	1		750	20-30
				600	2-10
brown rice	60/45	1		750	25-30
				600	2-10
risotto	60/45	1		750	20-30
pasta	60/45	1		1000	15-25
wholemeal pasta	60/45	1		1000	10-15
				600	5
ravioli	60/45	1		1000	10
				750	3-5
CONVENTIONAL PRODUCTS – FROZEN					
French fries	60/45	2		200-210	25-35
french fries, 2 levels	60	2+4		200-210	30-40*
	45	1+3			40-50*
chicken medallions	60/45	2		210-220	15-20*
fish fingers	60	3		210-220	20-35*
	45	2			20-30*
lasagne, 400 g	60/45	2		210-220**	40-50
diced vegetables	60/45	2		200–210/360	30-40*
croissants	60	3		100	20
				170	15-20
	45	1		100	20
				170	15-20
BAKED PUDDINGS, SOUFFLÉS AND DISHES AU GRATIN					
potato moussaka	60	1		180-200/360	30-45
	45	2		180-190	
lasagne	60/45	2		180-200/360	30-40

General tips and advice for baking

Table continued from last page

Dish	 cm			 °C	 min
sweet baked pudding	60	1		750	15-25
	45	2		170-180	35-45
sweet soufflé	60	3		180 **	16-20
	45	2			
dishes au gratin	60	3		170-190	30-45
	45	2			
stuffed tortillas, enchiladas	60/45	2		180-190	10-20
grilling cheese	60	4		L1	15-25*
	45	3			10-15*
OTHER					
popcorn	60/45	1		1000	2-4
liquids	60/45	1		1000	1-3
melting butter/chocolate	60/45	1		90-180	3-10

General tips and advice for baking

Cooking with a food probe (🍴FOOD PROBE)


(depending on the model)

The food probe allows for accurate monitoring of the core temperature of food during cooking.

⚠ WARNING!

The food probe should not be in direct vicinity of the heating elements.

Only use the temperature probe recommended for this oven.

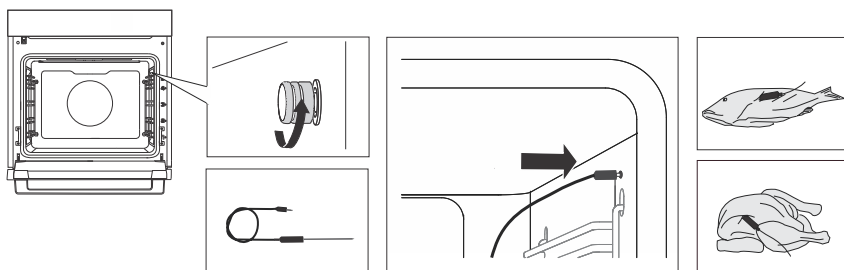

1. Stick the metal end of the probe into the thickest part of the food.
NOTE: To start cooking with the food probe, the current cooking process must first be interrupted and then the food probe must be connected to the socket. By inserting the probe into the socket, the preset functions on the oven are deleted.
2. Unscrew the socket cover in the upper righthand corner of the front of the oven (depending on the appliance model) and plug the probe into the socket.
By pressing < or > select automatic or manual setting.
3. - In manual mode, the symbol 🍴 will appear next to the system on the display unit, together with the preset cooking temperature (in the temperature range up to 210 °C), which can be changed. Also determine the core temperature of the food (in the temperature range from 30 to 99 °C). The use of manual mode is shown in the picture above.
- In automatic mode, touch < or > to select the dish. The recipes have a predetermined system, temperature and cooking time. You can change the degree of browning
NOTE: When using the probe, setting the cooking time is not possible.
4. Confirm the setting by touching ▷|| .
During cooking, the set temperature and current temperature of the foodstuff are alternated on the display. If desired, you can change the cooking temperature or the desired core temperature of the foodstuff during operation.
5. When the set core temperature is reached, the oven will stop operating. The display will show **Cooking complete**. An acoustic signal will be heard which you may turn off with any key. After one minute, the acoustic signal will be switched off automatically.

💡 INFORMATION!

The use of a food probe enables automatic cooking selection mode.

General tips and advice for baking

Correct use of the probe, by type of food:

- poultry: stick the probe in the thickest part of the breast;
- red meat: stick the probe into a lean part that is not marbled with fat;
- smaller chunks with bone: stick them into an area along the bone;
- fish: stick the probe behind the head, towards the spine.

WARNING!

After use, carefully remove the probe from the food and socket, clean it, and tighten the socket cover.

Recommended doneness levels for different types of meat

Type of food	 / $^{\circ}\text{C}$ / 	medium rare [$^{\circ}\text{C}$]	medium [$^{\circ}\text{C}$]	medium well [$^{\circ}\text{C}$]	well done [$^{\circ}\text{C}$]
BEEF					
beef, roast	 / 170 / 2	48-52	53-58	59-65	68-73
beef, sirloin	 / 140 / 2	49-53	54-57	58-62	63-66
roast beef/rump steak	 / 160 / 3	49-53	54-57	58-62	63-66
burgers	 / High / 4	54-57	60-63	66-68	71-74
VEAL					
veal, sirloin	 / 140 / 2	49-53	54-57	58-62	63-66
veal, rump	 / 160 / 2	49-53	54-57	58-62	63-66
PORK					
roast, neck	 / 170 / 3	/	/	65-70	75-85
pork, loin	 / 140 / 2	/	/	60-69	/
meat loaf	 / 170 / 2	/	/	/	80-85
LAMB					
lamb	 / 170 / 3	60-65	66-71	72-76	77-80
MUTTON					
mutton	 / 170 / 3	60-65	66-71	72-76	77-80

General tips and advice for baking

Table continued from last page

Type of food	 /  °C / 	medium rare [°C]	medium [°C]	medium well [°C]	well done [°C]
GOAT MEAT					
goat	— / 170 / 3	60-65	66-71	72-76	77-80
POULTRY					
poultry, whole	 / 210 / 2	/	/	/	82-90
poultry, breast	 / 170 / 2	/	/	/	62-65
FISH AND SEAFOOD					
trout	 / 210 / 4	/	/	62-65	/
tuna	 / Medium / 4	/	/	55-60	/
salmon	 / Medium / 4	/	/	52-55	/

Cleaning and maintenance

WARNING!

Be sure to unplug the appliance from the power supply and wait for the appliance to cool down.

Children should not clean the appliance or perform maintenance tasks without proper supervision.


- For easier cleaning, oven cavity and baking tray are coated with special enamel for a smooth and resistant surface.
- Regularly clean the appliance and use warm water and hand dishwashing liquid to remove larger impurities and limescale. Use a clean soft cloth or sponge cloth.
- Never use aggressive or abrasive cleaners and accessories (abrasive sponges and detergents, stain and rust removers, scrapers for glass ceramic plates).
- Food residue (fat, sugar, protein) can ignite during the use of the appliance. Therefore, remove larger chunks of dirt from the oven interior and accessories before each use.
- Oven equipment is dishwasher-safe. Pull-out guides are not suitable for this type of cleaning.

Exterior of the appliance	Use hot soapy water and a soft cloth to remove impurities and wipe the surfaces dry.
Interior of the appliance	For stubborn dirt or grime, use conventional oven cleaners. After using such agents, wipe the appliance thoroughly with a wet cloth to remove any residual cleaning agents.
Utensils and guides	Clean with hot soapy water and a damp cloth. In case of persistent dirt, we recommend prior soaking and the use of a brush.

If the cleaning results are not satisfactory, repeat the cleaning process.

WARNING!

Do not use corrosive, abrasive, or aggressive cleaning agents when cleaning the oven's front panel. Such agents may damage the surface, cause scratches, or permanently alter its appearance.

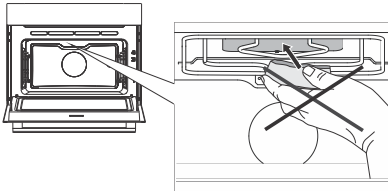

Never use aggressive cleaners, abrasive cleaners or sponges, stain and rust removers etc. on the oven cavity ceiling cover.

Cleaning and maintenance

Cleaning with steam


This program makes it easier to remove any stains from inside the oven.

The function is the most effective if used regularly, after each use.

Before running the cleaning program, remove all large visible chunks of dirt and food residues from the oven cavity.

⚠ WARNING!


Use the AQUA CLEAN system when the oven has fully cooled down.

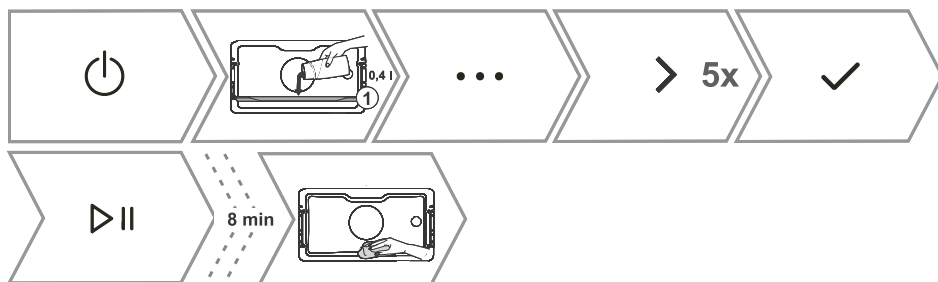

1. Insert the glass baking tray into the first guide and pour 0.15 l of warm water into it.
2. Switch on the appliance and select By touching < or > select **CLEANING**. Confirm with ✓ to enter the submenu.
3. Confirm with ✓ . The programme operates for 8 minutes. After the end of the programme, the display shows **End**.
4. When the program is completed, carefully remove the baking tray, using oven mitts (there can still be some water on the baking tray). Wipe down the stains with damp cloth and soapsuds. Thoroughly wipe the appliance with a wet cloth to remove all cleaner residue. If the cleaning process is not successful (in case of particularly stubborn dirt), repeat it.

Removing wire and fixed pull-out (extendible) guides

Use conventional cleaning products to clean the guides.

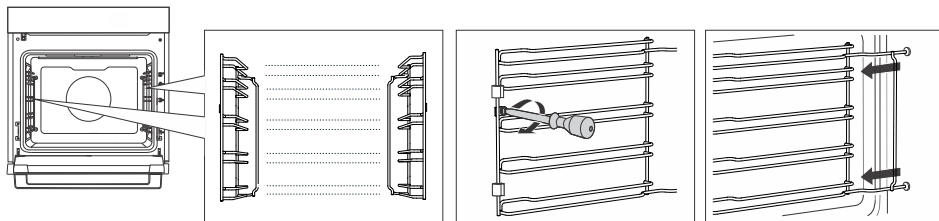

1. Use a screwdriver to remove the screw (you can also use a suitable coin that fits the indentation in the screw head).
2. Remove the guides from the holes in the back wall.

Table continued from last page

NOTE: Take care not to lose the spacers fitted on the guides. You have to reinstall them after cleaning. After cleaning, re-tighten the screws on the guides with a screwdriver. When replacing the guides, make sure you mount them on the same side they were installed on prior to removal.

💡 INFORMATION!

When removing the guides, take care not to damage the enamel coating.

Replacing the bulb

The light bulb is a consumable and is not covered by warranty. Before changing the bulb, remove any utensils from the oven.


Halogen lamp: G9, 230 V, 25 W

The oven is fitted with a halogen lamp.

This product contains a light source of energy efficiency class (G).

⚠ WARNING!

Only replace the light bulb when the appliance is disconnected from the power supply. Be careful not to damage the enamel. Use protection to avoid burns.

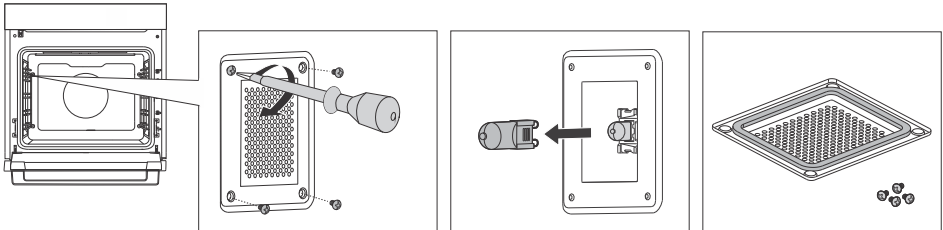

1. Undo the four screws. Remove the cover and the glass.
2. Pull out the halogen bulb (on the left and right) and replace it with a new one.

NOTE: There is a gasket on the lid that should not be removed from the lid. The gasket must fit on the wall of the oven space.

Troubleshooting

During the warranty period, only a service center authorized by the manufacturer may carry out any repairs.


- Before making any repairs, make sure the appliance is disconnected from the power mains either by removing the fuse or by disconnecting the power plug from the wall outlet.
- Any unauthorized repairs of the appliance may result in electric shock and short circuit hazard; therefore, do not perform them. Leave such work to an expert or a service technician.
- In case of minor problems with appliance operation, check this manual to see if you can fix the problem yourself.
- If the appliance is not operating properly or at all due to inappropriate operation or handling, a visit from a service technician shall not be free of charge, even during the warranty period.
- Save the instructions for future reference and pass them on to any subsequent owners or users of the appliance.
- Following is some advice on rectifying some common problems.

Troubleshooting table

Problem/error	Cause
The main fuse in your home trips often.	Call a service technician.
The oven lighting does not work.	The process of changing the light bulb in the oven is described in the chapter Replacing the bulb.
Control unit is not responding, the screen is frozen.	Press and hold the On/Off button for 8 seconds until the screen is reset. Disconnect the appliance from the power mains for a few minutes (undo the fuse or switch off the main switch); then, reconnect the appliance and switch it on.
The display shows the error Err X. In case of a double-digit error code, the display will show Err XX.	There is an error in the electronic module operation. Disconnect the appliance from the power mains for a few minutes. If the error is still indicated, call a service technician.
Condensate accumulation on the inner side of the glass.	This phenomenon is normal when cooking food with a large amount of liquid, e.g. potatoes, cottage cheese, etc. Allow the glass to cool down after use, then clean the remaining drops.
Sparks appear in the oven.	Make sure all lamp covers are securely fastened and that all spacers are fitted on the wire guides. Make sure the guides in the oven are correctly placed.
If the problems persist despite observing the above advice, call an authorized service technician. Repair or any warranty claim resulting from incorrect connection or use of the appliance shall not be covered by the warranty. In this case, the user will cover the cost of repair.	

Label – appliance information

 A rating plate with basic information about the appliance is attached to the edge of the oven. Precise information on appliance type and model can also be found on the warranty sheet.



- | | |
|------------------|------------------------------|
| 1. Serial number | 5. ID/code |
| 2. Model | 6. QR code |
| 3. Type | 7. Technical information |
| 4. Brand | 8. Compliance labels/symbols |

Compliance information

Radio equipment type:	Built-in WiFi/BLE module
Wi-Fi indicator	
Operating frequency range:	2412 ~ 2472 MHz
Maximum output power:	19.99 dBm EIRP
Maximum antenna gain:	3.26 dBi
Bluetooth indicator	
Frequency range:	2402 ~ 2480 MHz
Carrier Output:	10.00 dBm
Emission type:	F1D

INFORMATION!

The project uses the LVGL graphics library as its graphical user interface.



Our product packaging is made of environmentally friendly materials that can be recycled, disposed of, or destroyed without any hazard to the environment. To this end, packaging materials are labelled appropriately.

The symbol on the product or its packaging indicates that the product should not be treated as normal household waste. The product should be taken to an authorized collection centre for waste electric and electronic equipment processing.

Correct **disposal** of the product will help prevent any negative effects on the environment and health of people, which could occur in case of incorrect product removal. For detailed information on removal and processing of the product, please contact the relevant municipal body in charge of waste management, your waste disposal service, or the store where you bought the product.

We reserve the right to any changes and errors in the instructions for use.

Cooking test

EN60350-1: Only use equipment supplied by the manufacturer.

Always insert the baking tray all the way to the end position on the wire guide. Place pastry or cakes baked in moulds as shown in the image.

* Preheat the appliance until it reaches the set temperature. Do not use the rapid preheat mode.

** Preheat the appliance for 5 minutes. Do not use the rapid preheat mode.

*** Preheat the appliance for 10 minutes. Do not use the rapid preheat mode.

1) Turn after 2/3 of cooking time.

BAKING							
Dish	Equipment	mould placement	 cm		 °C	 min	
shortbread – single rack	shallow baking tray		60	3	130**	35-45	—
			45	2	140	35-45	—
shortbread – single rack	shallow baking tray		60	3	140-150	30-40	
			45	2	140	40-50	
shortbread – two racks/levels	shallow baking tray		60	2,4	135***	35-45	
			45	1,3	140	40-55	
small cakes – single rack	shallow baking tray		60	3	160-170***	20-30	—
			45	2	160-170	25-35	—
small cakes – single rack	shallow baking tray		60	3	150-160**	25-35	
			45	2	160-170***	25-35	
small cakes – two racks/levels	shallow baking tray		60	2,4	140	30-40	
			45	1,3	160-170	40-50	
sponge cake	round metal mould, diameter 26 cm/wire rack		60	1	160***	25-35	—
			45	2	160***	25-35	—
sponge cake	round metal mould, diameter 26 cm/wire rack		60	3	170-180**	25-35	
			45	1	165	25-35	
apple pie	2 x round metal mould, diameter 20cm/wire rack		60	1	160-170***	70-90	—
			45	1	170-180***	70-90	—

Table continued from last page

BAKING							
apple pie	2 × round metal mould, diameter 20cm/wire rack		60	3	175	70-90	
			45	2	170-180	70-90	
BROILING							
toast	wire rack		60/45	5	max	5-15	
Burgers ¹⁾	wire rack + shallow baking sheet as drip tray		60/45	4	max	30-45	

THERMAL PROCESSING WITH MICROWAVES						
Dish	Equipment	 cm		 W	 min	
custard cream, 1000 g	glass baking dish, 25 × 25 cm, uncovered + glass baking tray	60	1	360	30-40	
		45	1	360	28-33	
sponge cake	round glass baking dish, diameter 22 cm, uncovered + glass baking tray	60	1	360	25-30	
		45	1	360	15-20	
meat loaf, 900 g	glass baking dish, 25 × 12.5 cm, uncovered + glass baking tray	60	1	600 360	15 15-25	
		45	1	600 360	10-15 15-20	
defrosting ground meat, 500 g	glass baking tray	60	1	180 90	5 20-30	
		45	1	180 90	5 15-25	

Cooking test

BAKING WITH COMBINED SYSTEMS							
Dish	Equipment	 cm		 °C	 W	 min	
potatoes au gratin	round glass baking dish, diameter 22 cm, uncovered + glass baking tray	60	1	170-180	600	40-55	
		45	1	180-190	600	35-50	
cake	round glass baking dish, diameter 22 cm, uncovered + glass baking tray	60	1	170-180	180	35-45	
		45	1	180-190	90	30-40	
chicken, 1.2 kg	glass baking dish, uncovered + glass baking tray	60/45	1	220	360	45-55	



982477-a1

